



- | | |
|--|---|
| <p>1. Throttle- SLT31059
 2. Speed Dial- SLT31001
 Speed Control Knob- SLT31057
 3. Horn Switch- SLT31034
 4. Light Switch- SLT31073 [1]
 5. Battery Guage- SLT31056
 6. Key Switch- SLT31006
 Key - SLTKEY
 7. Horn Speaker- SLT31060
 8. Light Assy- PLT31074
 9. Upper Tiller Cover- PLT31008
 10. Lower Tiller Cover- PLT31009
 11. Tiller- SLT31062
 12. Basket- SLT35003
 13. Basket Bracket- SLT35051
 14. Tiller Swivel Assembly- SLT31010
 15. Tiller Swivel Knob- SLT31010K
 16. Front Bumper- SLT31028
 Front Bumper Bracket- SLT31022
 17. Front spring- SLT31071
 18. Connecting Rod Set- SLT350103
 19. Steering Fork Assembly- PLT31015 [1]
 20. Tiller Bearing Set- SLT31021
 21. Front Wheel- PLT31017
 22. Bearing (pr)- STDS1012
 23. Axle Bolt Assembly- SLT31049
 24. Hub Cap- PLT31025
 25. Rear Wheel- PLT31003
 26. Red Decorations- SLT31029
 Blue Decorations- SLT31030
 Silver Decorations- SLT31031
 27. Rear Spring- SLT31072
 28. Rear Frame Contact Block- SLT31069
 29. Connection Block & Harness- SLT31033
 30. Transaxle W/ Motor & Brake- SLT31053
 Electromagnetic Brake- SLT31037
 Motor Only- SLT31036
 Transaxle Only- SLT350112
 Motor Mount Hardware- SLT31076</p> | <p>31. Battery Pack W/21AH Batteries- SLT31051-21AH
 Battery Case Only- SLTPHX31051-20AH
 Battery (2 needed)- LRM412123
 Battery Box Spacers- SLT31068
 32. Battery Box Contact Plate- SLT31066
 33. Battery Box Hold Down- SLT31047
 34. Anti Tip Wheel- SLT31026
 35. Rear Shroud- SLT31011
 36. Handle- SLT31070
 37. Battery Box Shroud- SLT31027
 38. Foot Shroud- SLT31024
 39. Front Shroud- SLT31013
 40. Circuit Breaker- SLT31067
 41. Seat Post- SLT31018
 42. Seat Post Bolt- SLT31065
 43. Disconnect Handle Assy- SLT31019
 44. Seat 18"- PLT35045
 Seat 20"- PLT35045-20
 45. Armrest Knob 18" Seat- PLT31052
 Armrest Knob 20" Seat- PLT31052-20
 46. Left Arm Rest 18" Seat- PLT35040L
 Left Arm Rest 20" Seat- PLT35040L-20
 46. Right Arm Rest 18" Seat- PLT35040R
 Right Arm Rest 20" Seat- PLT35040R-20
 47. Left Arm Pad 18" Seat- PLT35014L
 Right Arm Pad 18" Seat- PLT35014R
 Arm Pad 20" Seat- PLT35014-20
 48. Seat Plate 18" Seat- PLT31023
 Seat Plate 20" Seat- PLT31023-20
 49. Delta Tiller- SLT31054
 50. Controller- PHXP45-09
 51. Left Steering Axle- PLT31021L [1]
 Right Steering Axle- PLT31021R [1]
 52. L Steering Axle- SLT31015
 53. Charger/USB Ports- SLT31074 [1]
 54. Battery Charger- SLT302111
 55. Tiller PC Board- SLT31058
 56. Front Frame Contact Block- [2]
 Not Shown
 Wire Harness- PLT31063</p> |
|--|---|

[1] When stock is gone the part is no longer available.

[2] The part is no longer available.