

**McKESSON**

# Diverter Valve

For use with MFR# 146-RTL12046.

## Válvula de desvío


INSTRUCCIONES

## Vanne directionnelle

INSTRUCTIONS

For use with MFR # 146-RTL12046 .

### INSTALLATION INSTRUCTIONS

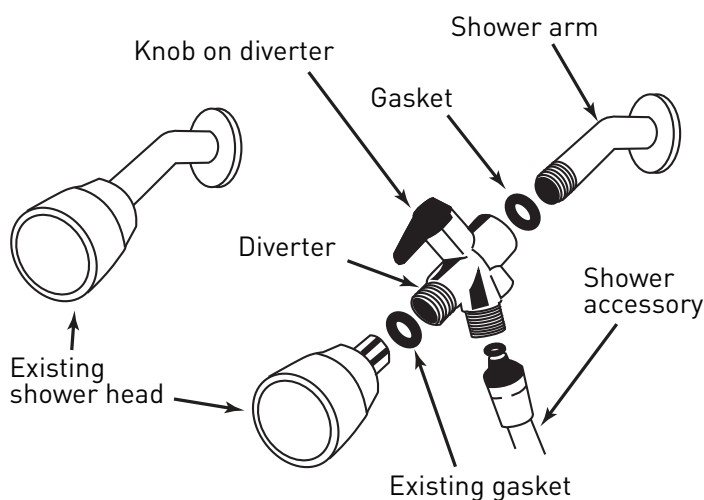

1. Remove existing shower head and gasket from shower arm.
2. Clean the threads on shower arm with steel wool.
3. Apply pipe thread sealing tape onto the shower arm.
4. Place the gasket (provided) into end of diverter valve (Figure A).
5. Using a wrench, connect large valve to shower arm.
6. Install shower hose onto bottom connection of diverter valve.
7. Re-attach shower head onto front of diverter valve (Figure B)
8. Turn black knob to change from regular shower to shower spray.
9. Turn black knob back to use conventional shower.

Technical support, replacement parts and warranty information? Call 1-866-694-5085

General product questions? Call 1-800-777-4908

#### ■ Satisfaction Guaranteed

For complete details, please visit  
[mms.mckesson.com/mckesson-brands](https://mms.mckesson.com/mckesson-brands).

Distributed by McKesson Medical-Surgical Inc.

Richmond, VA 23233

PVN A0718

Made in China